# 7.4 cu. ft. TurboSteam® Front Load Dryer

- 7.4 cu. ft. Ultra Large Capacity
- TurboSteam® Technology
- SteamSanitary<sup>™</sup> and SteamFresh<sup>™</sup> Cycle
- Al Fabric Sensor / Smart Pairing<sup>™</sup>
- 23 Cycles / 11 Options
- · Sensor Dry System

**COLOR AVAILABILITY** 

Capacity (cu. ft.)

Matching Washer

Electronic Controls with LCD

APPEARANCE

Dial-A-Cycle™

DRYER CYCLES Number of Cycles

Sensor Dry Cycles

Manual Dry Cycles

DRYER OPTIONS Number of Options

Temperature Settings

Options

Display **Touch Buttons** 

- FlowSense<sup>™</sup> Duct Clogging Indicator
- NeveRust<sup>™</sup> Stainless Steel Drum

DLEX6700B (Electric) – Black Steel DLGX6701B (Gas) – Black Steel **CAPACITY & MATCHING WASHER** 

7.4

Yes

Yes

Yes

23

11

WM6700HBA

X Large Load Dry

Speed Dry, Air Dry

Light, Signal

Ultra Low

Cycle Optimization, Damp Dry Signal, Wrinkle Care, Control Lock, Wi-Fi, Energy Saver, TurboSteam®, Reduce Static, Remote Start, Drum

High, Med. High, Medium, Low,

Normal, AI Dry, Bedding, Delicates, Towels, Quick Dry, Timed Dry, Antibacterial, Perm. Press, SteamFresh™, Heavy Duty, Air Dry, SteamSanitary<sup>™</sup>, Super Dry, Active Wear, Jeans, Blanket Refresh, Low Temp Dry, Overnight Dry, Easy Ironing, Small Load, Large Load Dry,

LG ThinQ® Technology (Wi-Fi)









FABRIC CARE	
Steam Technology	TurboSteam®
Al Sensor Dry <sup>™</sup>	Yes
Sensor Dry	Yes
Precise Temperature Control with	Yes
Variable Heater	
CONVENIENCE	
Drum Light	Yes (Door Open)
Control Lock	Yes
FlowSense <sup>™</sup> Duct Clogging	Yes
Indicator	
End of Cycle Signal	Yes
Remaining Time Display / Status Indicator(s)	Yes
Reversible Door	Yes
Venting Option	Electric: 4 Way Venting Gas: 3 Way Venting
3 Minute Installation Check	Yes
Leveling Legs	4 Adjustable Legs
ADA Compliant	No
SMART FEATURES	'
Wi-Fi Enabled	Yes
ThinQ®Technology	Yes
ThinQ Care	Yes
Voice Control	Google Assistant, Amazon Alexa
SmartDiagnosis <sup>™</sup>	Yes
Remote Start (On / Off)	Yes
Remote Monitoring & Notifications	Yes
MATERIALS AND FINISHES	
Drum Material	NeveRust™ Stainless Steel
Cabinet	Painted Steel
Door / Rim	Glass / Chrome
Door Cover	Tempered Glass Door

TECHNICAL SPECS		
Electrical Requirements	Electric: 240V, 30 Amp Gas: 120V, 15 Amp	
Gas Dryer BTU Rating	20,000	
Power Outlet Location	Within 24" of Either Side	
Plug Type	Gas: 3-Prong (Cord Attached to Unit) Electric: 4-Wire (Cord Required)	
ENERGY STAR® Certified	Yes	
Combined Energy Factor (CEF)	Electric: 3.94 Gas: 3.49	


INC			


Y Connector


OPTIONAL ACCESSORIES	
Pedestal	WDP6B
Pedestal (W x H x D)	27" x 13 <b>5/8</b> " x 28" (43 <b>7/8</b> " D with Door Open)
ADA-Compliant Pedestal Riser	WDPS1B
ADA-Compliant Pedestal Riser (W x H x D)	27" x 5 1/8" x 27"

OPTIONAL ACCESSORIES CONTIL	NUED
Stacking Kit	KSTK1
Drying Rack	3750EL1001A
LP Conversion Kit	383EEL3002D
Side Vent Kit	3911EZ9131X (Interchangeable with 383EEL9001B)
DIMENSIONS	
Product (W x H x D)	27" x 39" x 30 1/g"
Depth with Door Open	51 <b>3</b> / <b>8</b> "
Cutout Dimensions (W x H x D)	29" x 39 <sup>1</sup> / <sub>4</sub> " x 35" (32" D for Side or Bottom Venting)
Carton Dimensions (W x H x D)	29 5/8" x 43 5/ <sub>16</sub> " x 31 9/ <sub>16</sub> "
Approx. Weight (Product / Carton)	Electric: 123.7 lbs. / 134 lbs. Gas: 134 lbs. / 145.7 lbs.
LIMITED WARRANTY	
Parts and Labor	1 Year
Dryer Drum	3 Years (Parts Only)

## **DIMENSIONS / CLEARANCES**

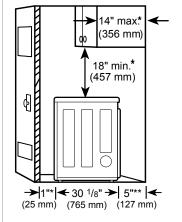

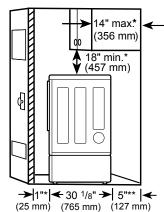

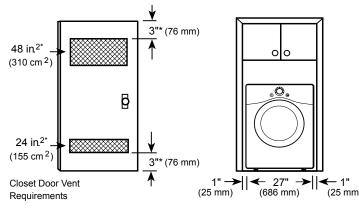


# SPACING FOR RECESSED AREA OR CLOSET INSTALLATION

The following clearances are recommended for this dryer. This dryer has been tested for clearances of 1 inch (2.5 cm) on the sides and rear. Recommended clearances should be considered for the following reasons:

- Additional clearances should be considered for ease of installation and servicing.
- Additional clearances should be considered on all sides of the dryer to reduce noise transfer. For closet installation, with a door, minimum ventilation openings in the top and bottom of the door are required. Louvered doors with equivalent ventilation openings are acceptable.


# **Closet Ventilation Requirements**

Closets with doors must have both an upper and lower vent to prevent heat and moisture buildup in the closet. One upper vent opening with a minimum opening of 48 sq. in. (310  $\mbox{cm}^2$ ) must be installed no lower than 6 feet above the floor. One lower vent opening with a minimum opening of 24 sq. in. (155  $\mbox{cm}^2$ ) must be installed no more than one foot above the floor. Install vent grills in the door or cut down the door at the top and bottom to form openings. Louvered doors with equivalent ventilation openings are also acceptable.

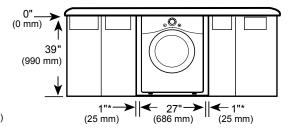

### **DIMENSIONS / CLEARANCES**


# INSTALLATION SPACING FOR RECESSED AREA OR CLOSET, WITH STACKED WASHER AND DRYER

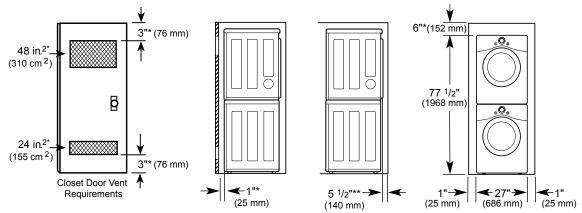

<sup>\*</sup> Required spacing

# **INSTALLATION SPACING FOR CABINET**

For cabinet installation with a door, minimum ventilation openings in the top of the cabinet are required.

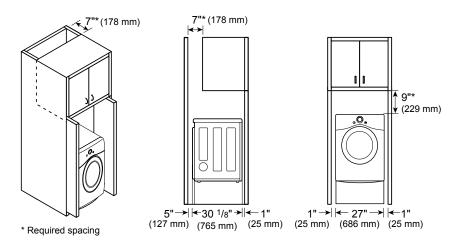

<sup>\*\*</sup> For side or bottom venting, 2-inch (51 mm) of spacing is allowed.

# **DLEX6700B / DLGX6701B**

## **VENTING THE DRYER**

- · If connecting to existing ductwork, make sure it is suitable and clean before installing the
- Venting must conform to local building codes.
- · Gas dryers MUST exhaust to the outdoors.
- Use only 4-inch (10.2 cm) rigid, semi-rigid or flexible metal ductwork inside the dryer cabinet and for venting outside.
- The exhaust duct must be 4 inches (10.2 cm) in diameter with no obstructions. The exhaust duct should be kept as short as possible. Make sure to clean any old ducts before installing your new dryer.
- Rigid, semi-rigid or flexible metal ducting is recommended for use between the dryer and the wall. All non-rigid metal transition duct must be UL-listed. Use of other materials for transition duct could affect drying time.
- · Ductwork is not provided with the dryer. You should obtain the necessary ductwork locally. The vent hood should have hinged dampers to prevent backdraft when the dryer is not in use.
- The total length of flexible metal duct must not exceed 8 ft. (2.4 m).

# NOTE:

Deduct 6 ft. (1.8 m) for each additional elbow. Do not use more than four 90° elbows.

# **DUCTWORK**

Wall Cap Type	Number of 90° Elbows	Maximum length of 4-inch diameter rigid metal duct
Recommended	0	65 ft. (19.8 m)
-4"	1	55 ft. (16.8 m)
(102 mm)	2	47 ft. (14.3 m)
(102 mm)	3	36 ft. (11.0 m)
	4	28 ft. (8.5 m)
Use only for short run installations  2 1/2" (635 mm)	0	55 ft. (16.8 m)
	1	47 ft. (14.3 m )
	2	41 ft. (12.5 m)
	3	30 ft. (9.1 m)
	4	22 ft. (6.7 m)

# **ROUTING AND CONNECTING DUCTWORK**

### NOTE:


Follow the guidelines below to maximize drying performance and reduce lint buildup and condensation in the ductwork. Ductwork and fittings are NOT included and must be purchased separately.

- Use 4-inch (10.2 cm) diameter rigid, semi-rigid or flexible metal ductwork.
- The exhaust duct run should be as short as possible.
- Use as few elbow joints as possible.
- The male end of each section of exhaust duct must point away from the dryer.
- · Use duct tape on all duct joints.
- · Insulate ductwork that runs through unheated areas in order to reduce condensation and lint buildup on duct surfaces.
- · Incorrect or inadequate exhaust systems are not covered by the dryer warranty. Dryer failures or service required because of such exhaust systems will not be covered by the dryer warranty.

# **CORRECT VENTING**

# CONNECTING THE WATER INLET HOSE (STEAM DRYERS ONLY)

The dryer must be connected to the cold water tap using the new water supply hose. Do not reuse old hoses.

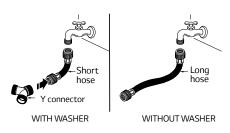

# **LG BUILDER**

### CONNECTING GAS DRYERS


## Gas Supply Requirements

- As shipped from the factory, this dryer is configured for use with natural gas (NG). It can be converted for use with propane (LP) gas. Gas pressure must not exceed 8-inch (20.4 cm) water column for NG, or 13-inch (33.1 cm) water column for LP.
- A qualified service or gas company technician must connect the dryer to the gas service.

# **Electrical Requirements for Gas Models Only**

- This dryer must be plugged into a 120-VAC, 60-Hz. grounded outlet protected by a 15-ampere fuse or circuit breaker.
- This dryer is equipped with a three-prong grounding plug for protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

# **ELECTRIC & GAS CONNECTION LOCATIONS**

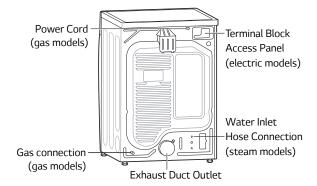

## CONNECTING ELECTRIC DRYERS

# **Electrical Requirements for Electric Models Only**

- This dryer must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the dryer.
- The dryer has its own terminal block that must be connected to a separate 240 VAC, 60-Hertz, single-phase circuit, fused at 30 amperes (the circuit must be fused on both sides of the line). ELECTRICAL VOLTAGE LISTED ON THE NAMEPLATE. DO NOT CONNECT THE DRYER TO 110-, 115-, OR 120-VOLT CIRCUIT.
- If the branch circuit to dryer is 15 ft. (4.5 m) or less in length, use UL (Underwriters Laboratories) listed No.-10 AWG wire (copper wire only), or as required by local codes. If over 15 ft. (4.5 m), use UL-listed No.-8 AWG wire (copper wire only), or as required by local codes. Allow sufficient slack in wiring so the dryer can be moved from its normal location when necessary.
- The power cord (pigtail) connection between the wall receptacle and the dryer terminal block IS NOT supplied with the dryer. Type of pigtail and gauge of wire must conform to local codes



# **FOUR-WIRE POWER CORD**

- A 4-wire connection is required for all mobile and manufactured home installations, as well as all new construction after January 1, 1996.
- · A UL-listed strain relief is required.
- Use a 30-amp, 240-volt, 4-wire, UL-listed power cord with #10 AWG-minimum copper conductor and closed loop or forked terminals with upturned ends.



# FOUR-WIRE DIRECT WIRE

- A 4-wire connection is required for all mobile and manufactured home installations, as well as all new construction after January 1, 1996.
- A UL-listed strain relief is required.
- Use UL-listed 4-wire #10 AWG minimum copper conductor cable. Allow at least 5 ft. (1.5 m) of wire to allow for removal and reinstallation of the dryer.

